


## 1 Store vaccine at ideal temperature: 40°F

**Never freeze refrigerated vaccine!**  
Exception: MMR can be stored in fridge or freezer

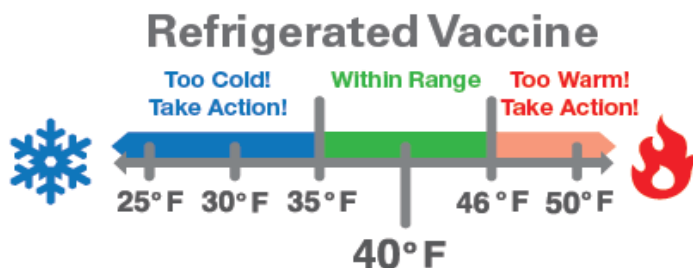

Report out of range temperatures immediately!

## 2 Record daily temperatures

Check and record the temperatures and alarm status (lights) of your data logger TWICE DAILY – first thing in the morning and before leaving at the end of the day.



### Morning AM:

**No Press:** Current temperature (X)

**Press #1:** Maximum recorded temperature (▲) since last reset (M)

**Press #2:** Minimum recorded temperature (▼) since last reset (M)

**Press #3 and Hold:** CLr ▲ ▼ appears after 3–5 seconds. Resets min/max temperatures.

**Check Light:** Is it green? (Y or N)

### Evening PM:

**No Press:** Current temperature (X)

**Check Light:** Is it green? (Y or N)

### Data Logger Display



### Paper Temperature Log

Day of Month	1	2	3
Time of Day	am : pm	am : pm	am : pm
Staff Initials	kh 5 9	kh 5 9	kh 5 9
LED Green?	Y	Y	Y
≥50°			
49°			
48°			
47°			
46°			
45°			
44°			
43°			
42°			
41°			
40°			
39°	M		M
38°	X	X	X
37°	X		M
36°			
35°		M	
34°			
33°			
32°			
≤31°			

**Refrigerator (F)**

**DO NOT USE VACUUM**

**DO NOT USE VACUUM**

## 3 Take action if out of range!

**Public Vaccine:** Report **red lights** and out-of-range temperatures immediately to the Immunization Program.

Go to [www.immunization.mt.gov](http://www.immunization.mt.gov) and click on "Vaccine Incident Report"

**Private Vaccine:**\* Call manufacturers directly with the following information:

- Total time vaccine was out of range
- Maximum or minimum temperature achieved

\*If the incident involves public and private vaccine, call the Immunization Program first. Our calls to manufacturers on public vaccine may also apply to your private vaccine.



## Best Practices

- **Take your time:** Read and record temperatures accurately.
- **Make your mark:** Initial the log when recording temperatures.
- **Leave it blank:** If a temperature was not recorded, leave the space blank!